

Electronic Cooking Thermometer

Instructions

1. Open the door on the back of the unit and insert the AAA battery. Estimated battery life is 2 years.
2. To switch on the thermometer, press the **ON /OFF** button.
3. To select °C or °F display, press the **°C / °F** button.
4. To measure a temperature, insert the stainless steel probe into the medium being measured and the temperature will be displayed on the screen.
5. The thermometer remembers the maximum and minimum temperatures measured. To view:
Press the **Min-Max** button once to display the highest temperature [**MAX** is displayed]
Press the **Min-Max** button twice to display the lowest temperature [**MIN** is displayed].
6. To reset the memory, press the **Min-Max** button once to display the highest temperature [**MAX** is displayed] then press the **Clear** button to reset the maximum memory. [--- is displayed]. Press the **Min-Max** button twice to display the lowest temperature [**MIN** is displayed] and then press the **Clear** button to reset the minimum memory. [--- is displayed].

Caution

- The tip of the probe is sharp - take care when using the instrument and KEEP OUT OF REACH OF CHILDREN.
- Always keep the thermometer head away from direct heat or cold source
- The probe is very sensitive - do not use an abrasive to clean
- Do not use the thermometer in a microwave oven.
- Do not submerge the handle in water.
- This instrument is not dishwasher safe.