



Jumbo Max Min Thermometer & Hygrometer

Functions:

- Displays indoor or outdoor temperature (when probe attached) and indoor humidity.
- Records the maximum and minimum temperature and humidity.
- °C or °F switchable.
- Large LCD Display.
- 12 or 24 hour time display.
- Display automatically changes from time to date display every 5 seconds.

Note: The IN reading relates to the sensor on the main unit
The OUT reading relates to the probe sensor reading

Specification:

Temperature Range: Indoor: -10 to +50°C (+14 to +122°F)

Outdoor: -50 to +70°C (-58 to +158°F)

Humidity Range: 20 to 99%RH

(< 20%RH - displays 10%RH directly)

Accuracy: +/- 1°C

Battery: AAA included

Instructions

1. Attach probe and site probe sensor outdoors to enable outdoor temperature reading
2. Remove tab from battery compartment and press **RESET***.
3. Press **°C/F*** - to switch temperature between °C and °F.
4. **Clock**
To select 12 or 24 hr clock- Hold **MODE** for 2 seconds, press **ADJ** to change from 12 to 24 hour clock. Press **MODE** to cycle through time/date setting. Press **ADJ** to alter time/date settings.
5. **ALARM**
When display shows time, press **MODE**, "AL" shows on display. Press **ADJ** to select (🕒) for any alarm time set, or (🔊) for alarm set on the hour only, or (🕒 🔊) for both. Press and hold **MODE** for 2 seconds, hour will flash. Press **ADJ** to set hour for alarm, then **MODE** and **ADJ** again to set minutes. When alarm sounds, press mode to stop sound.
6. **MAX/MIN**
Press **MEMORY** to show maximum values recorded.
Press **MEMORY** again to show minimum values recorded.
Press and hold **MEMORY** for 2 seconds to clear memory.

* **RESET** and **°C/°F** switch can be found at back of instrument, behind stand. Insert non-metallic toothpick, etc, into required hole.

Note:

If abnormal display appears, press **RESET**.
Dispose of used meter and battery in accordance with local regulations.



Brannan Thermometers
Cleator Moor Cumbria
England
www.brannan.co.uk