



Folding Probe Thermometer



Specifications:

Temperature Range: -50 to +250°C&F (switchable)

Accuracy: +/- 1°C between -20 and 150°C
(otherwise +/-2°C)

Sampling Time: 1 second

Battery: 1 x LR44 (included)

Resolution: 0.1°C&F

Protection: IP65


Operation:

Before using for first time, please insert 1 x LR44 battery into battery compartment at back of thermometer.

The switch to change units from °C to °F scale is locate inside battery compartment.

The thermometer will automatically switch on when the probe is opened by approx 30° angle.

It will automatically power off when the probe is closed less than 30° angle.

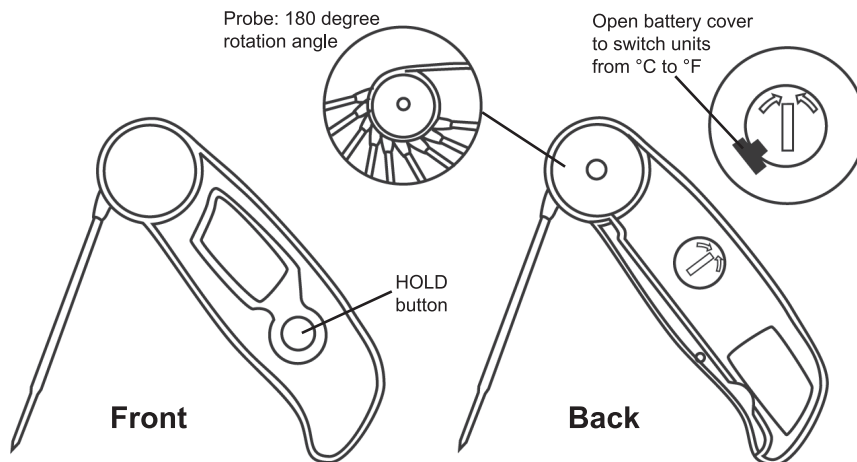

Brannan Thermometers
Cleator Moor Cumbria
England
www.brannan.co.uk

